

**OMXIE**

**QK-PL 2005**

**BGA Precision Placement System**

**User's Manual**

2010

Thank you for purchasing our QK-PL2005 Precision Placement System. The system is exclusively designed for accurately aligning SMD component. Please read this manual carefully before operating the system. Store this manual in a safe, easily accessible place for future reference.

### 1. Description

Thank you for using the QK-PL2005 precision placement system. The system provides precision alignment for the QK-IR2005 rework system. Combining the QK-IR2005 with the QK-PL2005 provides a complete BGA rework system.


### 2. Specifications

- |  |  |
|--|--|
| 1. Power consumption:  | about 15W  |
| 2. Fuse:   | 1A (110V), 0.5A (220V)   |
| 3. Camera:   | 12V/300mA<br>Magnification: 22×10times<br>Horizontal resolution is 480 TV lines<br>Signal type PAL composite |
| 4. Vacuum pump:  | 12V/600mA, 0.05Mpa (Max)   |
| 5. LED lighting:   | White LED down and red LED up with adjustable brightness   |
| 6. Keyboard:   | 8 keys   |
| 7. Upward and downward movement range:   | 93mm   |
| 8. Upward and downward movement motor:   | 24VDC/100mA  |
| 9. Weight:   | 22Kg   |
| 10. Vacuum pencil is controlled by on and off switch   |  |
| 11. Camera on PL and IR is controlled by telescopic arm. Brightness of IR camera will be controlled by keyboard of PL. |  |
| 12. Camera output signal is video signal   |  |

#### Note:

- \* When purchasing the equipment, please specify voltage.
- \* The video camera has been calibrated before leaving factory.

### 3. Product Picture

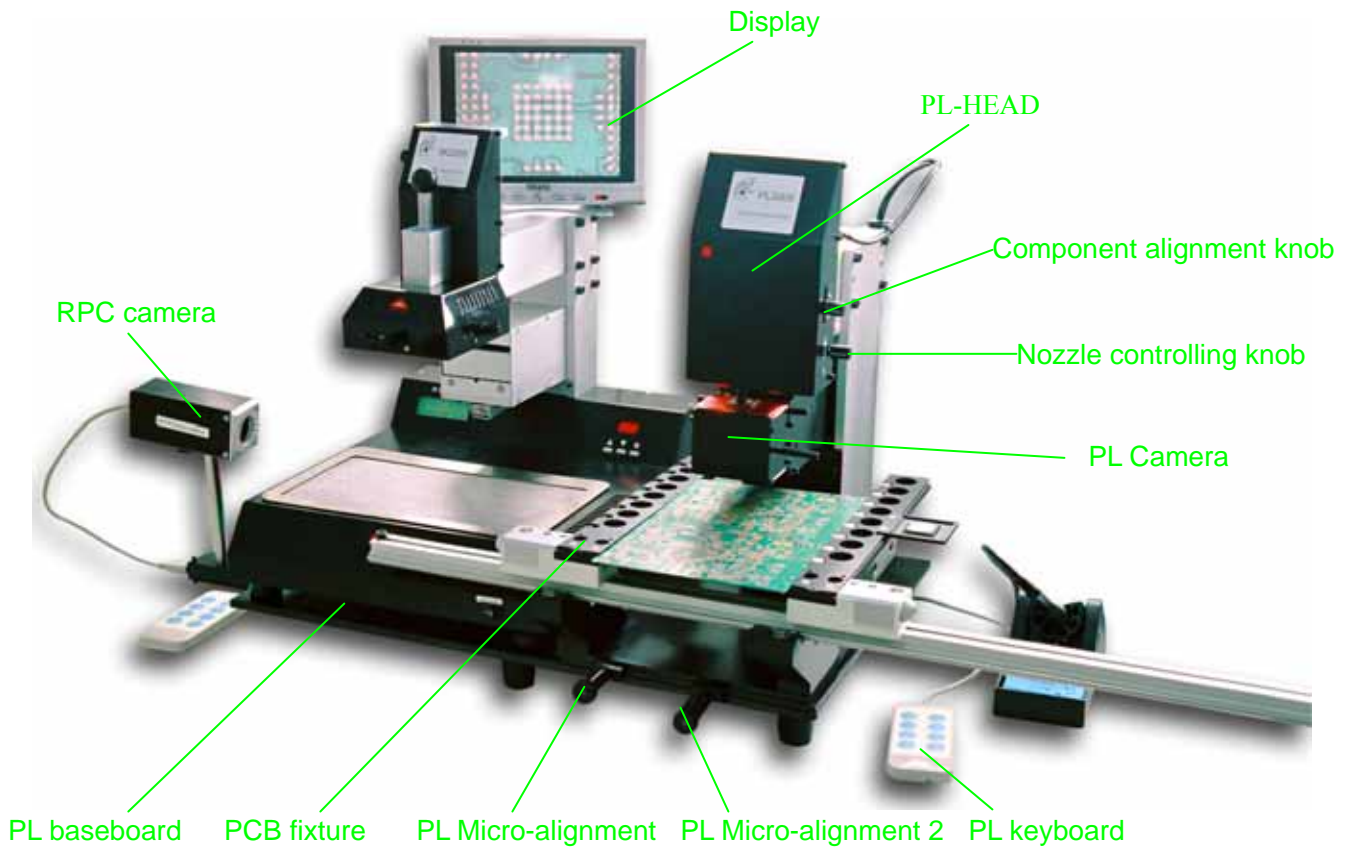

#### 4 Checking the received equipment

After receiving the packages, please check if all the parts are complete and in good condition.


- \* Main parts of QK-PL2005 (PL camera, PL-HEAD, Vacuum and housing)
- \* PL keyboard
- \* Power cord
- \* RPC2005—IR camera (optional)
- \* LCD monitor (optional)
- \* PCB fixture
- \* QK-PL2005 user's manual

Please contact with your agent immediately if any parts are missing or damaged.

#### 5. Install the equipment

##### Note:

- \* Make sure the supply voltage complies with the equipment voltage.
- \* Take out the setscrew on the PL camera arm before installing the equipment.

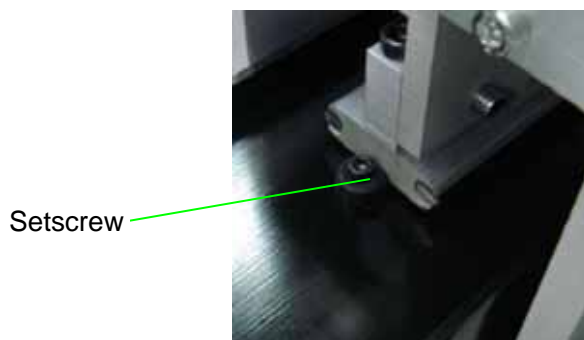



### 5.1 Placing the QK-IR2005 system


There are four mounting points on the left side of the QK-PL2005. Place the QK-IR2005 rework system on the left side of the QK-PL2005, and align the four support pins with the four locating points on the QK-PL2005.

### 5.2 Assembling the QK-PL2005


1. Put the plug of display into the display connection socket behind equipment.
2. Put the plug of IR camera into its camera socket and its video socket.
3. Put the plug of PL camera into its camera socket and its video socket.

Please refer to the following picture.

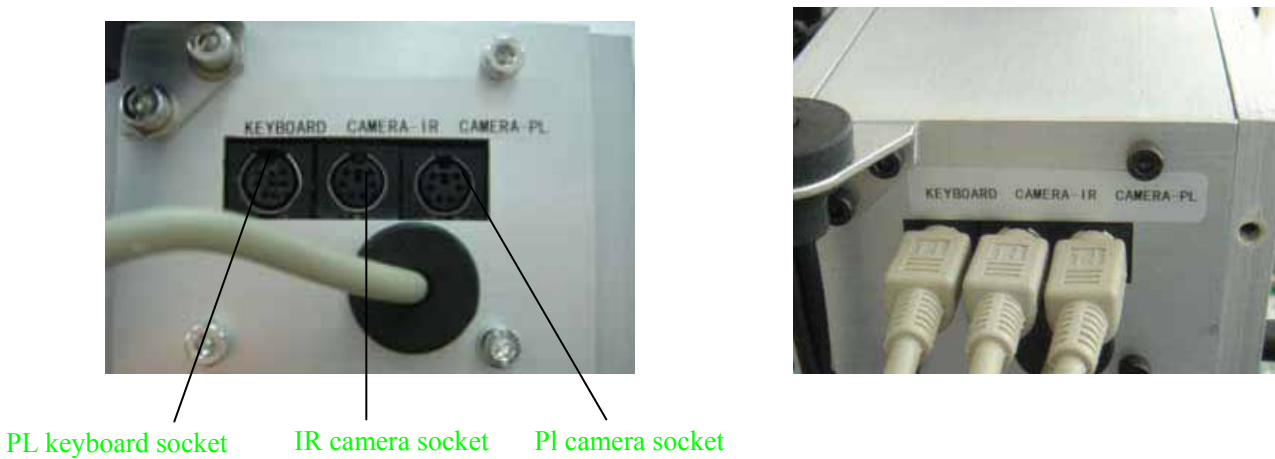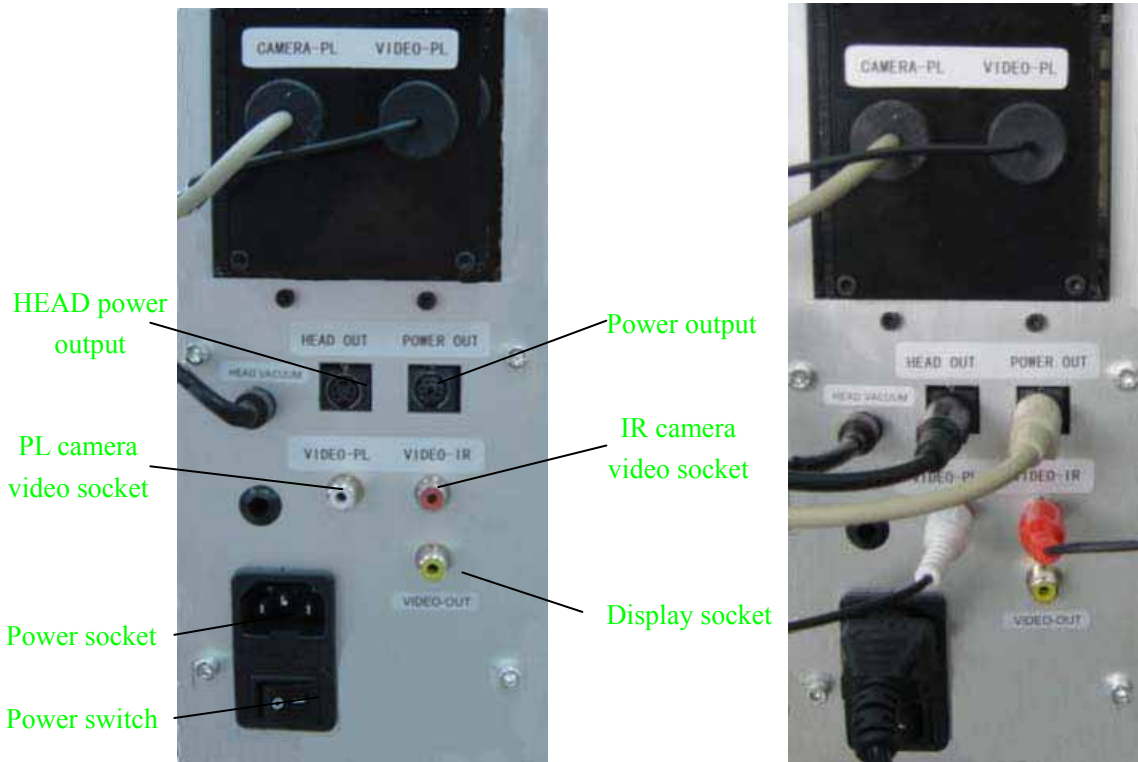

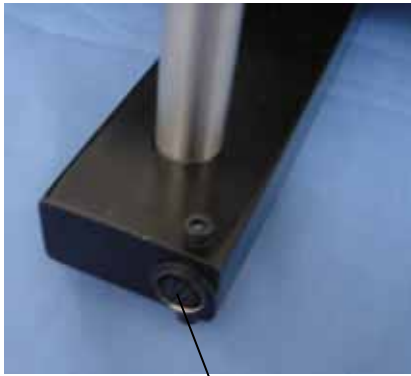

IR camera socket

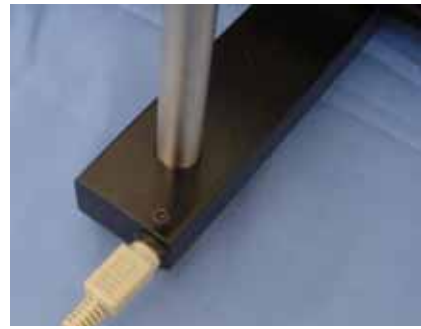

### 5.3 Apply Power

Put the connector of power cord into Power socket behind equipment, and put the plug into three-terminal grounding power socket to switch on power.

## 6. keyboard and parts

### 6.1 keyboard functions

1. When PL camera is pulled out, keyboard only controls PL camera and its lighting. PL-head's (placement head) upward and downward movement is forbidden. Key “↑” and key “↓” are useless.
2. When PL camera is retracted inside, keyboard only controls reflow camera of BGA-IR and its lighting. PL-head's upward and downward movement is allowed. Key “↑” and key “↓” can control upward and downward movements of PL-HEAD.
3. When PL camera is pulled out, press “LIGHT B” + “↑” keys simultaneously to increase the brightness of PL bottom light; press “LIGHT B” + “↓” keys simultaneously to decrease the brightness of PL bottom light; press “LIGHT T” + “↑” keys simultaneously to increase the brightness of PL top light; press “LIGHT T” + “↓” keys simultaneously to decrease the brightness of PL top light.
4. When PL camera is retracted inside press “LIGHT B” + “↑” keys simultaneously to increase the brightness of IR light; press “LIGHT B” + “↓” keys simultaneously to decrease the brightness of IR light; press “LIGHT T” + “↑” keys simultaneously to increase the brightness of IR light; press “LIGHT T” + “↓” keys simultaneously to decrease the brightness of IR light.
5. “ZOOM+” and “ZOOM-“ keys are used for controlling zooming of image.
6. “FOCUS+” and “FOCUS-“ are for the camera focusing purpose.
7. “↑” and “↓” key is for controlling upward and downward movement of PL-HEAD.


### 6.2 Other Operational Parts

#### 1. PCB fixture

Movable PCB fixture is able to fix different size PCB. It has three locknuts. Two locknuts are used for locking PCB clamp bar to prevent it from unnecessary moving. The third fixture locknut is used for locking orbit to prevent fixture from unnecessary moving.

Unscrew PCB locknuts and push the sliding block by hand to open the PCB clamp bar, make the distance between them accord with PCB size. Fix PCB between them and screw down PCB locknut after adjusting position. If you want to lock PCB fixture, please screw down fixture locknut.


We suggest that when you fix PCB, make PCB be fixed in the middle of orbit.

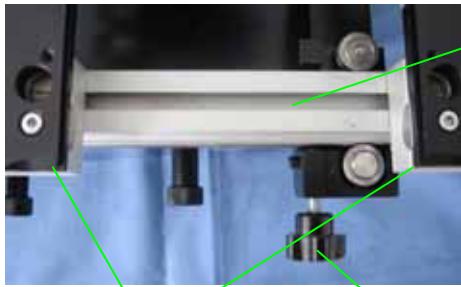

Navigation

Insert PCB from here

Fixture locknut

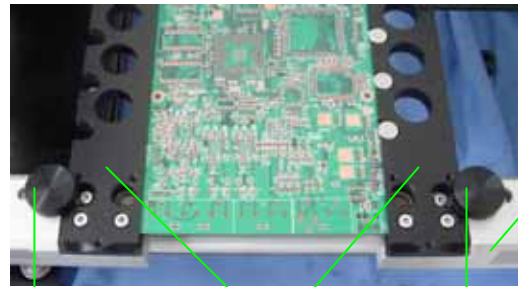

Sliding Block

PCB locknut

PCB clamp bar


PCB locknut

## 2. Adjustment knobs

There are two adjustment knobs on PL-HEAD, one is component aligning knob, and the other is nozzle controlling knob.

Turn nozzle controlling knob to make the vacuum nozzle move up and down. As soon as the vacuum nozzle touches component, the vacuum pump starts to work and pick up component. Turn it clockwise for up movement and turn it anticlockwise for down movement.

Turn component aligning knob to make nozzle turn, and change the position of component to realize the alignment purpose. Direction of turning knob accords with nozzle turning.

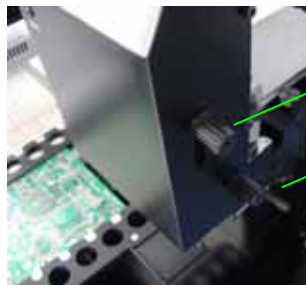

Component aligning knob

Nozzle controlling knob

Turn "PL Micro-adjustment knob1 to make PCB fixture move right and left for adjusting PCB's right and left position. Turn it clockwise for rightwards move and turn it anticlockwise for leftwards move.

Turn "PL Micro-adjustment knob2 to make PCB fixture move forward and backward for adjusting PCB's front and rear position. Turn it clockwise for forward move and turn it anticlockwise for move backward.



PL Micro-adjustment knob

PL Micro-adjustment knob

## 3. IR Camera

IR camera position can be adjusted. First, unscrew thumb nut in corresponding direction and then adjust. IR camera can move up and down or turn.



**Thumb nut**

#### **4. PL Camera**

It needs to use IR camera during the component aligning. PL camera will transmit the image of soldering point on PCB and component pins under nozzle to display through video signal and user can see these images on display screen. At the moment, you can use every adjusting function to align component.

It needs to completely pull out PL camera when using it. At this time, the image displayed is got by PL camera. When not in use, push it back, and the image displayed is got by IR camera.


When PL camera is pulled out, LED brightness of PL camera can be adjusted by keyboard. Press “LIGHT B” + “↑” keys simultaneously to increase the brightness of PL bottom light (white light); Press “LIGHT B” + “↓” keys simultaneously to decrease the brightness of PL bottom light (white light); Press “LIGHT T” + “↑” keys simultaneously to increase the brightness of PL top light (red light); Press “LIGHT T” + “↓” keys simultaneously to decrease the brightness of PL top light (red light).



**Pull and push the pole by hand**

#### **7. Aligning operation Instructions (Switch on the system's power)**


1. Turn on power switch of each part.
2. Press “↓” key to make PL-HEAD move down.
3. Place the soldered component into the center of salver, move PCB fixture to make the vacuum pen aim at component on the salver. Turn the nozzle controlling knob to make nozzle move down to pick up component. The component should be picked up from its center. As soon as the vacuum nozzle touches component, the vacuum pump starts to work and pick up component.

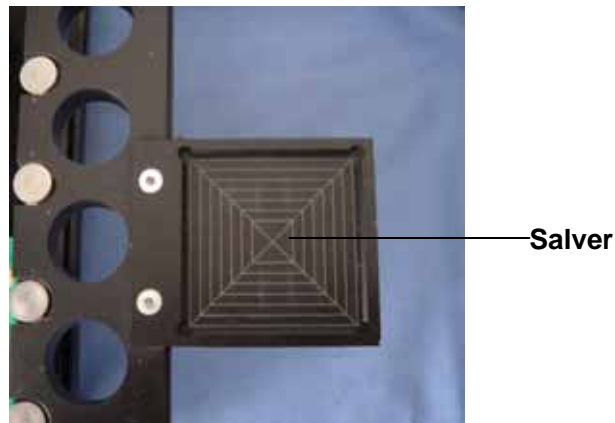


4. Press “↑” key to make PL-HEAD move up.
5. Pull out PL camera.
6. Check whether the image display on the display accords with user’s demand. Use keyboard to adjust it. Refer to “6.1 instruction of keyboard function”.
7. Unscrew the PCB locknuts on the PCB fixture to open PCB clamp bar. Fix the soldered PCB on PCB fixture and adjust PCB’s position. Make the screen display the image of soldering point, and make the images of soldering point image and component have the same center. It is convenient for adjusting. After roughly adjusting, screw down fixture locknut to lock PCB fixture to prevent it from sliding right and left.
8. Align the component with four adjustment knobs. Make the images of component solder pins image and the soldering point on PCB superpose. The image can be observed on the display. Aligning adjustment refer to “6.2.2 adjustment knobs”.
9. Push back PL camera after aligning.
10. Press “↓” key to make PL-HEAD move down.
11. Turn the nozzle controlling knob to make the nozzle move down for placing component on PCB. Once the component touches PCB, the vacuum stop working and make the component is placed.
12. Unscrew fixture locknut, move PCB to the part of IR2005 t



5. Press “↑” key to make PL-HEAD move up.
6. Pull out PL camera and adjust the image display by keyboard. Observe the images: if the two images (round) on the display superpose, the system is precise. If not, the system is imprecise, it needs to be adjusted.

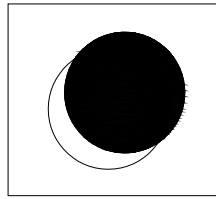


Imprecise

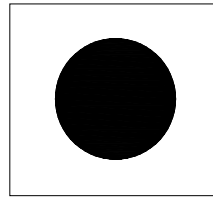

Precise

## 9.2 Adjusting the alignment

1. Unscrew the fixation screw of the camera box on both sides.

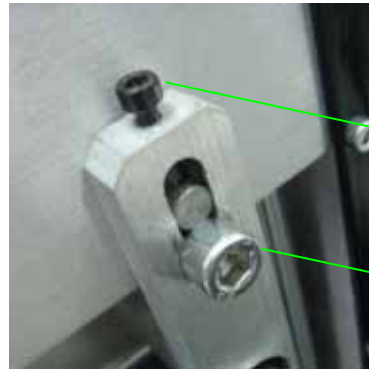

Adjusting screw

Fixation screw

2. Using spanner to adjust the two adjusting screws on fixed screws, the adjustment extent can't be too large, until the two round images on the display superpose.
3. After superposing, screw down fixation screws on both sides. After screwing down, the image of display is superposed too.
4. If necessary, you can repeat the above steps (9.1~9.2) to calibrate once again.

## 10. Equipment Maintenance

### Remark:

For ensuring reliable function and maintenance of equipment, please use parts provided by original factory.

### Clean parts:

Clean the dust on system with clean towel.

Clean the prism of PL camera with optical cleaning tissues and be careful not to scrape it.

Add oiling in axletree and gear periodically.

Use a towel with cleaning oil to clean PCB fixture and orbit.

### Contact:

Omnie Corp.

1-714-614-4896

1-909-498-4682

1-951-543-4543

Fax: (951)582-9422

125 Business center driver, Unit G.

Corona, CA 92880,USA

Emails:

sale@smtmax.com

info@smtmax.com